





KONTACT[®] SENSOR UNIT

INSTALLATION INSTRUCTIONS

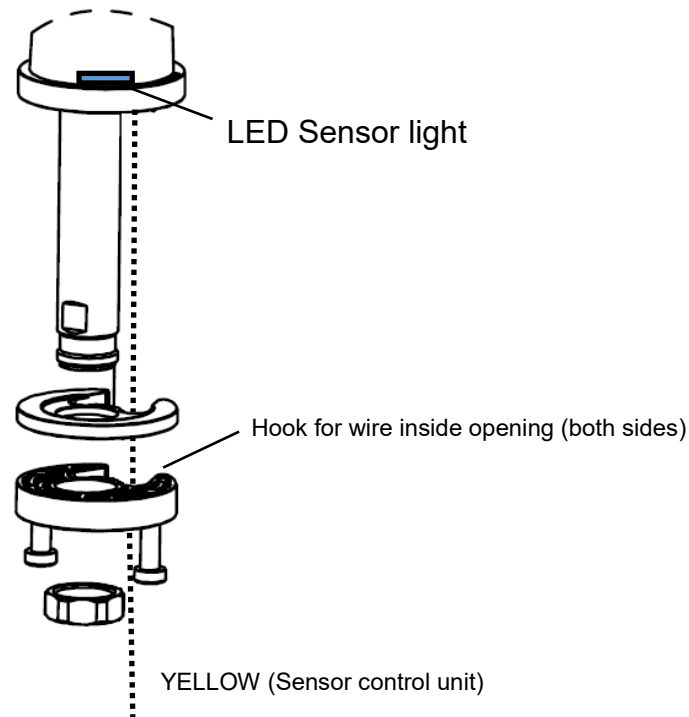

1. LED Sensor Light Wire:

- a. **CAREFUL NOT TO DAMAGE WIRE** when installing mixer.
- b. **WIRE NOT TO TOUCH METAL.**
 - i. **HOOK** inside opening of the C washer to hold wire in place.

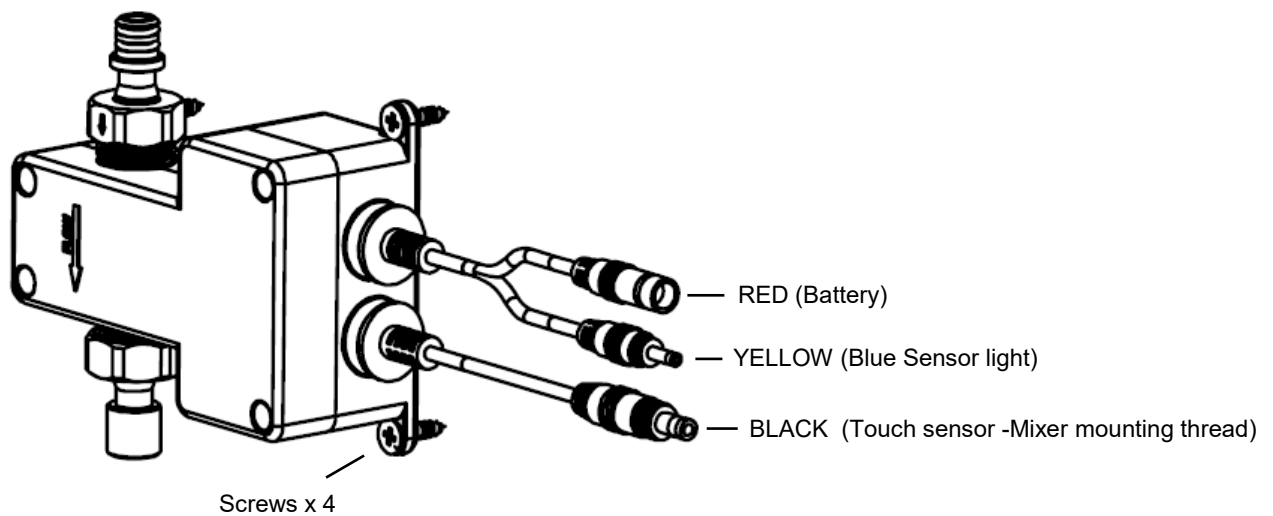


2. Mount Sensor Control Unit:

- a. 4 screws supplied.

IMPORTANT : 2 x Quick Fit HOSE CLIPS # 1

2 x FILTERS # 2 between mixer outlet hose and sensor control unit

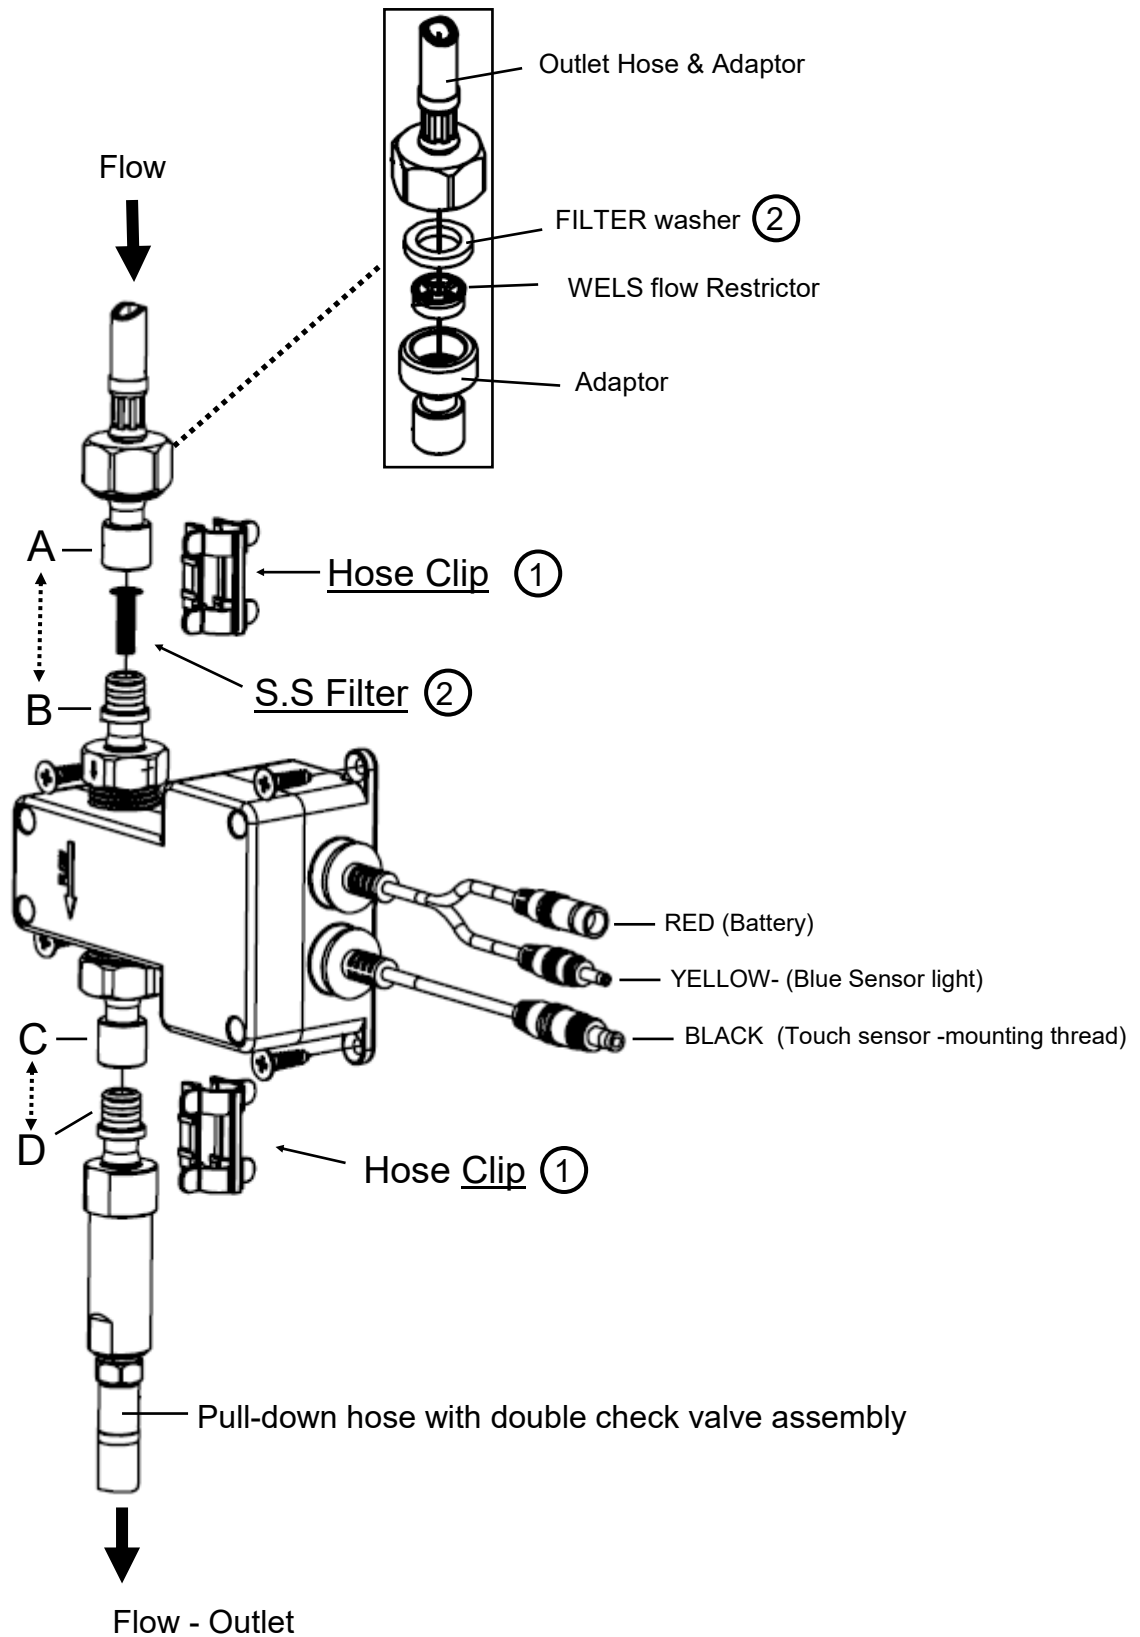


3. Install Inlet & Outlet Connections To Sensor Control Unit:

a. Connect A to B, C to D and secure with 2 x QUICK FIT HOSE CLIPS # 1.

i. NOTE: 2 x FILTERS # 2 between mixer outlet hose and sensor control unit (refer drawing above).


4. Install 4 x AA Batteries (not supplied):

- a. Tighten lock screw.
- b. Position battery box anywhere in cabinet.
 - i. The extension wire is included.
 - ii. NOTE: Only use extension if required (shorter is best).
 - iii. MUST BE SUPPORTED NOT HANGING FROM WIRES.

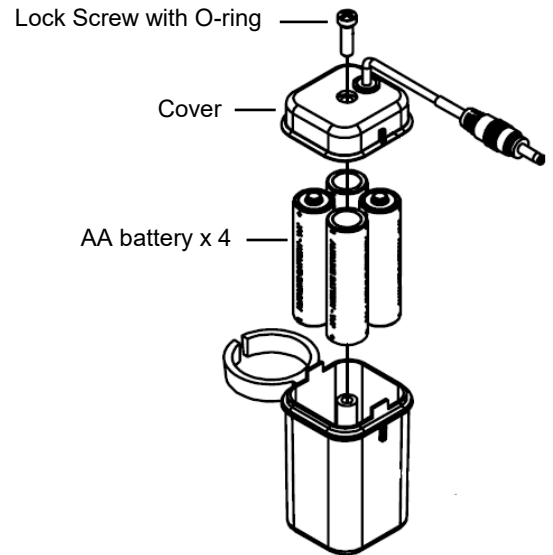

5. Sensor Connections:

- a. YELLOW (Blue LED light).
- b. BLACK (Touch sensor).
 - a. Ensure the **S/steel hook sits in groove**,
- c. RED (Battery) and **WAIT 10 SECONDS.**
 - i. LED light will stay on for approx. 5 seconds then will go off automatically.
 - ii. **WAIT 1 MINUTE** before use. SYSTEM IS SET.
- d. **RESET:** Disconnect battery wire and **WAIT 10 SECONDS.**

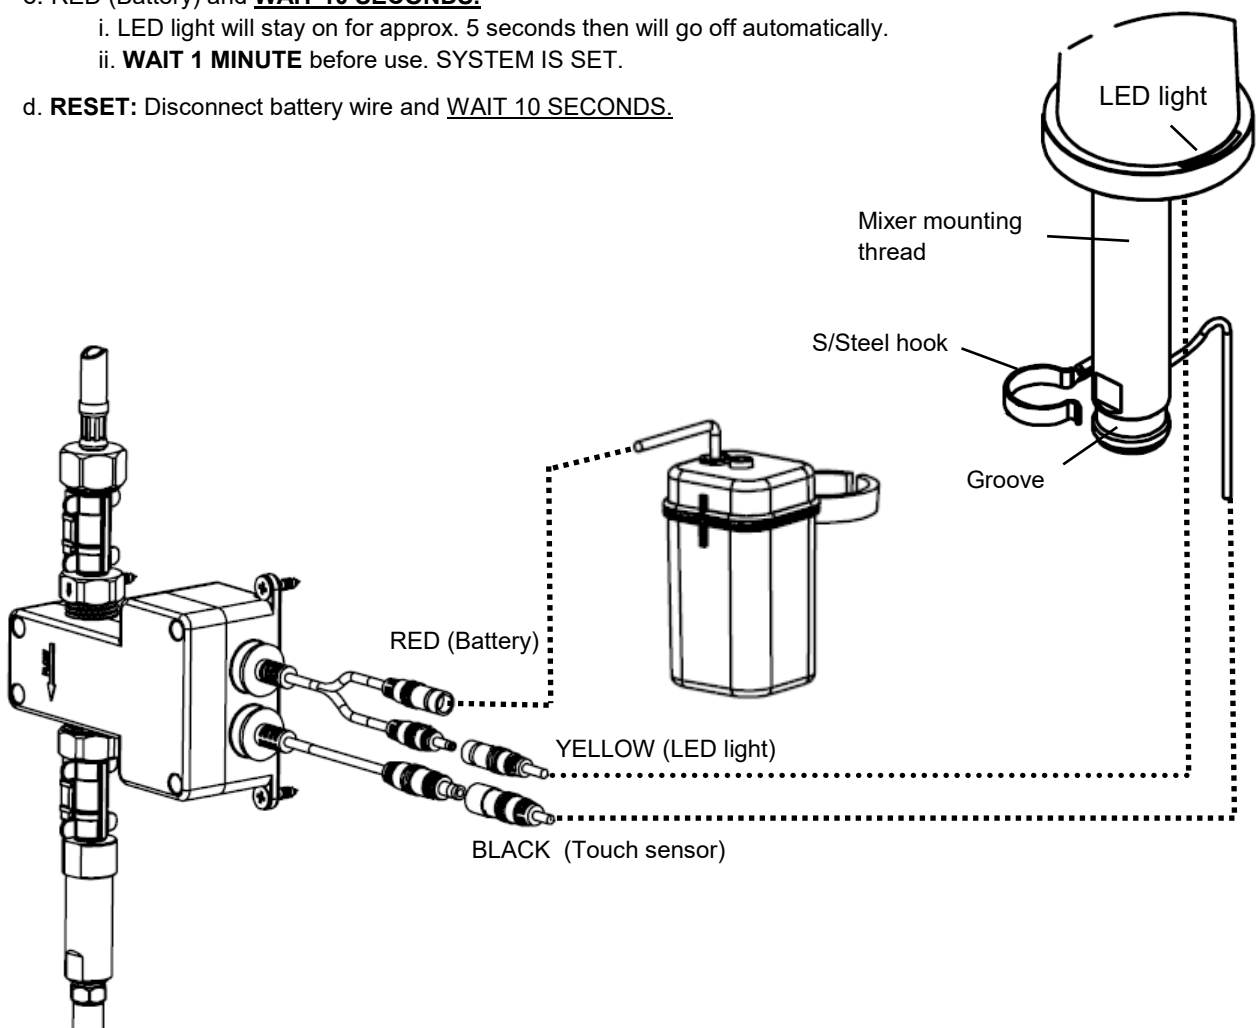

DO NOT: TAPE WIRES / TIE together. **TWIST** or **TOUCH** any **METAL.**

CHECK:


1. Turn on water supply, **check for leaks.**
 2. **Check mixer operation and flow.**
 - a. **To Reset Sensor - Disconnect battery wire wait 1 min (refer to No.6 .**
 - b. Low Flow - CLEAN FILTERS (Refer No.3 in instructions).
 4. **4 X AA batteries** are fitted in battery box (**Not supplied**).
 5. Wires not touching any metal.
 6. All sensor connections.
-

MIXER OPERATION:

1. Turn handle to the ON position.
2. To Activate & Shut Off: Touch any part of mixer **EXCEPT THE PULL-DOWN HAND PIECE.**
3. Each time when used on or off there will be **1 flash** on the sensor pad.
4. **DO NOT leave handle in the ON position for long periods or overnight**, turn handle to the OFF position.
5. **Manual Override (2 Options)**
 - a. Remove Control Sensor Unit (Refer No 3 in instructions).
Connect A to D by removing quick clips, connect and re-fit quick clip.

OR

 - b. Turn mixer on with touch, with the water running disconnect the RED battery wire.
NOTE: Sensor must be operating.

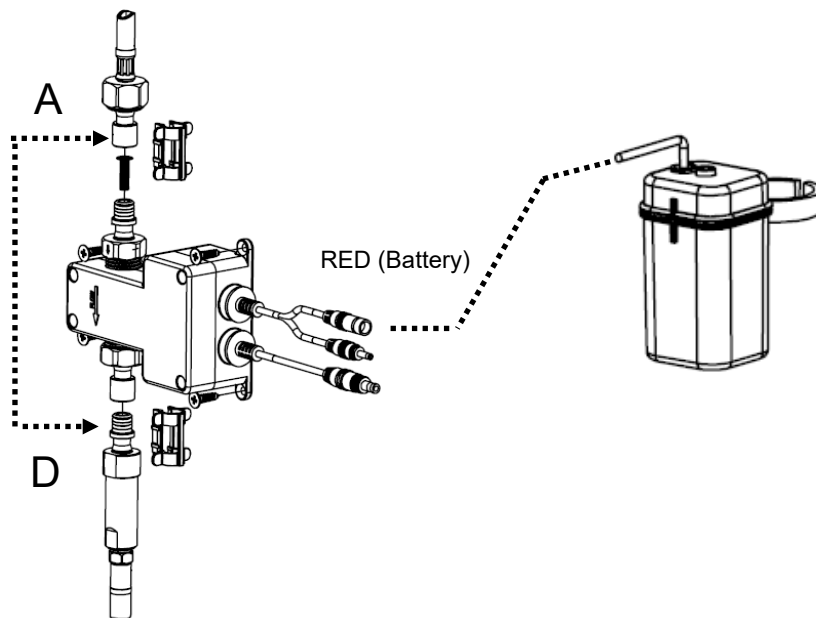**MAINTENANCE & CARE:**

1. Clean only with a soft damp cloth and dry with a soft cloth.
 - a. **DO NOT** use any cleaners use a **mild detergent mixed with water.**
2. If the sensor LED light is flashing, this indicates the batteries will need replacing, replace with 4 x 4AA batteries.