


## Checks:

1. Turn on water supply, **check for leaks.**
2. **Check mixer operation.**
3. Check the hand sensor protective film has been removed.
4. **4 X AA batteries** are fitted in battery box (**Not supplied**).

## Mixer operation:

1. Turn handle to the ON position #1
2. Wave hand over sensor #2 to activate the water flow ON and OFF.
3. **DO NOT leave handle in the ON position for long periods or overnight,** turn handle to the OFF position.

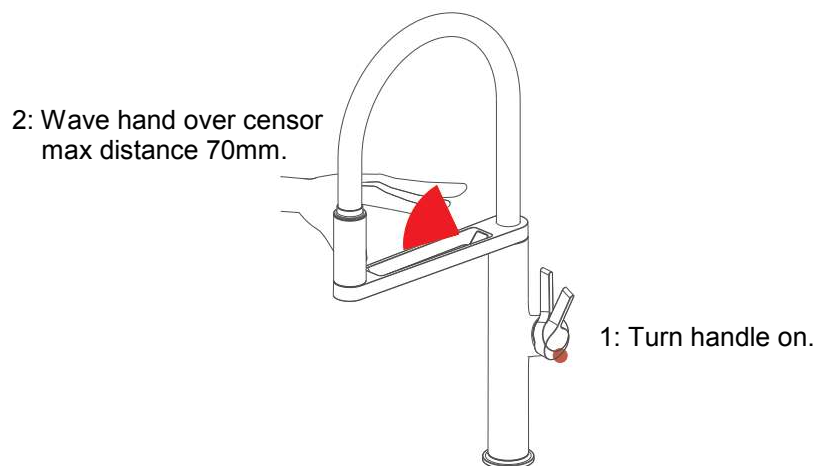

## Maintenance & Care:

1. There is an OFF switch on the control unit to by-pass the operation of the sensor.
2. The control unit can be removed and the outlet hose fitted to mixer outlet.
  - a. To remove push in tabs.
3. Each time when used on or off there will be **1 flash** on the sensor pad.
4. If the sensor plate is flashing, this indicates the batteries will need replacing, replace with 4 x AAA batteries.
5. The sensor pad **MUST** be kept clean.
  - a. Clean only with a soft damp cloth and dry with a soft cloth.
  - b. **DO NOT** use any cleaners.



## **GALAXY SENSOR MIXER** INSTALLATION INSTRUCTIONS

PRODUCT #

BATCH #

### ATTENTION PLUMBER

To ensure the optimum performance and customer satisfaction please adhere to the following:

- Flush out all pipe work prior to installation
- Installation shall be in accordance with the AS/NZS3500 series of standards.  
**The maximum operating pressure within any building should not exceed 500kpa.**  
Pressure above 500kpa can cause damage from water hammer, reducing life of appliances, taps and fittings and cause excessive noise in the plumbing system.
- Pressure over 500kPa will require a limiting valve.
- Inline filters must be installed on both hot and cold supplies.

### TECHNICAL DATA

- **Suitable for use with high pressure water supply only.**  
Not suitable for gravity-fed water heaters, low and unequal pressure networks.
- Minimum Water pressure for satisfactory operation: 150kPa
- Maximum Water pressure: 500KPa
- Maximum hot water temperature: 70°C  
If the Water temperature exceeds 70°C an approved Tempering Valve must be fitted.
- The flow rate of 6.0 l/m / 5 star rating for the mixer has been rated under the Australian & NZ Water Efficiency Labeling Scheme (WELS).

Please leave this form with the product once installed.

For full warranty terms and conditions, please see the warranty card enclosed with this product or visit [www.greenstapware.com/warranty-and-care/](http://www.greenstapware.com/warranty-and-care/)

### Australia:

**Distributed by: GREEN GLOBAL AUS PTY LTD**  
10/101 Wedgewood Rd, Hallam, Victoria 3803  
Phone: 1800 244 487 Fax: 1800 244 212  
Email: [aussales@greenstapware.com](mailto:aussales@greenstapware.com)  
Website: [www.greenstapware.com](http://www.greenstapware.com)  
**Service Hotline: 1800 244 992**

### NZ:

**Distributed by: Greens Global Limited**  
PO Box 5055, Hamilton, 3200  
22 The Boulevard, Te Rapa, Hamilton 3200  
Phone: 07 849 0109, Fax: 07 849 0540  
Website: [www.greenstapware.com](http://www.greenstapware.com)  
Email: [nzsales@greenstapware.com](mailto:nzsales@greenstapware.com)  
**Service Hotline: 0800 655 455**

BENCH TOPS	
◆	Formica/wooden bench tops, extra mounting support is required below the bench.
◆	Stainless steel bench tops ensure the triangle mounting is against the S/Steel.
◆	<b>Vitreous china tops additional sealant maybe required at the base of the mixer to ensure a water tight seal.</b>

To install mixer, cut a mounting hole 35mm in diameter in the bench surface.

1. Remove the quick fit locking mount from mixer.
  - a. **NOTE:** Unscrew 2-3 turns and pull off from the mounting thread.
  - b. **NOTE: Pull the black outlet hose through the locking mount first** then the inlet hoses and cable.
2. Lower and position mixer into bench top with fitted hoses.
  - a. Ensure base seal is in place.
3. From under bench install the triangle support plate, rubber washer, steel washer and then the quick fit locking mount to the mounting thread.
  - a. **NOTE: Feed the Black inlet hose last for each component.**
  - b. Push locking mount firm against the steel washer and hand tighten.
  - c. Triangle support plate used only for s/steel inserts.
4. Connect inlet hoses to water supply:
  - a. **Ensure pipe work is flushed.**
  - b. The union nuts must be connected to 15mm thread fittings which have a **machined end face with a chamfer, not “sawn off” threaded tube.**
  - c. **Do not over tighten the nuts.**
    - i. Hand tighten then 1/4 turn with spanner.
  - d. **Do not kink, stretch or twist**, any bends in the flexible hose should have a radius of no less than 85mm.
5. Remove the hand sensor protector film upon installation.

1. Connect the control unit (IN) to mixer outlet #1.
2. Connect the Black outlet hose #2 to the control unit (OUT).
  - a. Each connection push in fully until clicks in.
3. Connect the wire from sensor pad #3 to control unit (IN).
4. Connect the wire from battery box #4 to control unit (OUT) .
  - a. **NOTE: Batteries are NOT included**, requires 4 x AA batteries.
3. Screw the battery box to back or side wall.

