



Note: The Mixer can be mounted 40-65mm behind finished wall surface.
 Locate the correct position of the mixer by ensuring the "Hot" inlet (H), enters from the left, when the outlet to the shower is at the top.

Note: Unequal pressure only install the adjustable flow limiter.

Installing Valve Body:

1. Position the mixer against a mounting board within the maximum and minimum depth allowed and fix.
2. **Unequal Pressure Only: Install the adjustable flow limiter.**
 - a. To the mains cold water inlet, on right hand side of valve body.
 - b. Slotted **screw head** is to be **accessible** for adjustment purposes.
 - c. Do not install for equal pressure installations.
3. Connect water supply to the mixer and from the mixer to the shower outlet.
 - a. **Do not pressure test with valve in the open position when the outlet is closed.**
 - b. Turn on water supply to the mixer and **check for leaks.**
4. Cut out an access hole in the wall lining for the mixer, as per drawing and fix lining in place.

Install Trim Set:

1. **For Unequal Pressure: Adjust the flow regulator** before installing the face plate.
 - a. Adjust the volume of cold water to match the hot water.
 - b. The shower rose/slide shower must be installed before making adjustment.
2. To secure the faceplate to the wall, remove the protective tape from the seal and slide the faceplate over the mixer body and position against the wall lining.
 - a. Drain hole in plate at the bottom with H on the left and C on the right.
 - b. Sealant will be required behind faceplate on uneven surfaces for water seal.
5. Install the handle onto the cartridge lever and tighten the screw under the handle and fit button.



SELECT

(For All Pressure Installations)

INSTALLATION INSTRUCTIONS

PRODUCT #

BATCH #

ATTENTION PLUMBER

To ensure the optimum performance and customer satisfaction please adhere to the following:

- **Flush out all pipe work prior to installation.**
- Installation shall be in accordance with the AS/NZS3500 series of standards.
The maximum operating pressure within any building should not exceed 500kpa.
 Pressure above 500kpa can cause damage from water hammer, reducing life of appliances, taps and fittings and cause excessive noise in the plumbing system.
- Pressure over 500kPa will require a limiting valve.
- **Inline strainer / filter must be installed** in the line before the mixer to cover both hot and cold supplies (not supplied). Must be accessible.

TECHNICAL DATA

- **Suitable for use with high, low and unequal pressure supply networks.**
- Minimum Water pressure for satisfactory operation: 35KPa
- Maximum Water pressure: 500kPa
- Maximum hot water temperature: 70°C
 If the Water temperature exceeds 70°C an approved Tempering Valve must be fitted.
- The flow rate of the sink and basin mixers has been rated under the NZ Water Efficiency Labeling Scheme (WELS).

Please leave this form with the product once installed.

For full warranty terms and conditions, please see the warranty card enclosed with this product

Distributed by: Greens Global Limited

PO Box 5055, Hamilton, 3200
 22 The Boulevard, Te Rapa, Hamilton 3200
 Phone: 07 849 0109, Fax: 07 849 0540
 Website: www.greenstapware.com
 Email: nzsales@greenstapware.com
Service Hotline: 0800 655 455

#42216 03/25