

Install Hose And Roses:

1. Install hose and ensure sealing washers are in place.
 - a. Nut end to the diverter and tapered end to the hand set.
2. Install over head rose to rail and hand set to hose and ensure sealing washer is in place.
 - a. **NOTE: OVERHEAD - Restrictor MUST be fitted for mains pressure.**
(Refer below).

DIVERTER OPERATION

LOW PRESSURE:

1. **Pull out diverter button and 1/4 turn clock-wise.**
 - a. This will hold the diverter out.
 - b. **Always turn the button clock-wise.**

MAINS PRESSURE:


1. The diverter is spring loaded and requires the water pressure to stay engaged.
2. **Do not force the diverter back when the water is running** at overhead rose as this action may damage the diverter.
3. **Turn off mixer and will default to hand set.**

MAINS PRESSURE & WELS

NOTE: For mains pressure the restrictor must be fitted to the overhead to give back pressure for spring loaded diverter to stay open.

Hand Set:

To achieve the 3 star 9.0 l/m rating install the WELS restrictor washer between the **diverter outlet thread and hose.**



Overhead Rose:

INSTALL the 9.0 l/m rating WELS 3 star restrictor under the black seal washer between arm and rose.



Distributed by: Greens Global Limited
PO Box 5055, Hamilton, 3200
22 The Boulevard, Te Rapa, Hamilton 3200
Phone: 07 849 0109, Fax: 07 849 0540
Website: www.greenstapware.com
Email: nzsales@greenstapware.com
Service Hotline: 0800 655 455

#42195 06/25


RainBoost TWIN RAIL SHOWER

(All Pressure Installations)

INSTALLATION INSTRUCTIONS

PRODUCT #

BATCH #

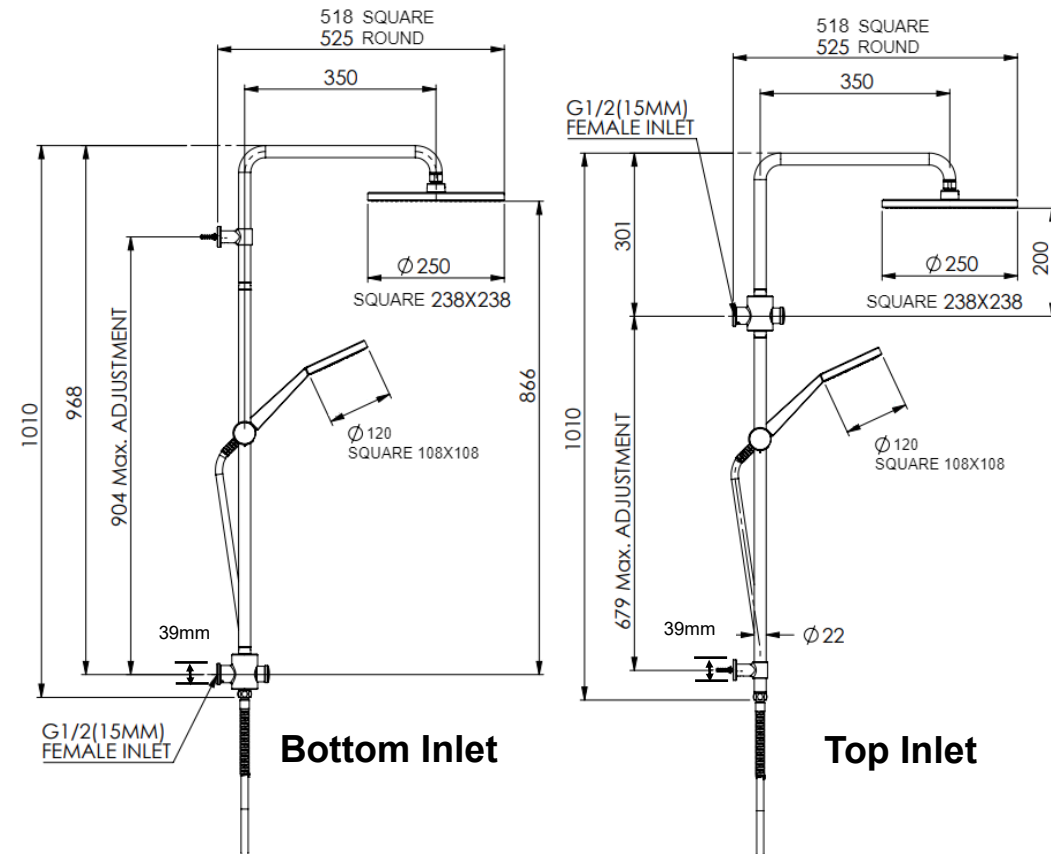

Technical Data:




Low Pressure: Recommend to be installed with a FloBOOST shower mixer.

Unequal Low Pressure:

- Minimum **hot** water pressure (Only with a FloBOOST). 10Kpa (flow pressure)
- Minimum **cold** water pressure (Only with a FloBOOST). 200kpa (flow pressure)
- Maximum cold water pressure. 500kpa

Equal Pressure - Low & Mains:

- Minimum water pressure. 20kpa (flow Pressure)
- Maximum Water pressure. 500kpa
- Pressure over 500kpa will require a limiting valve.
- Installation shall be in accordance with the AS/NZS3500 series of standards.

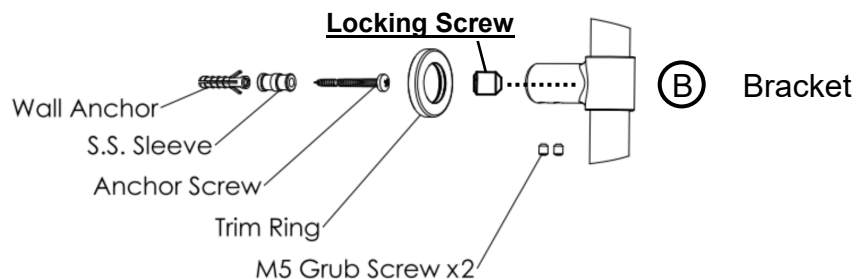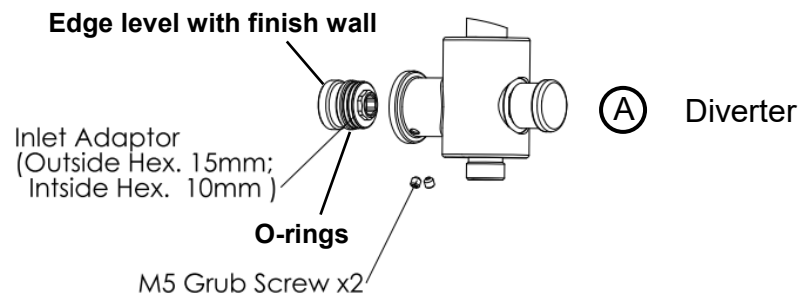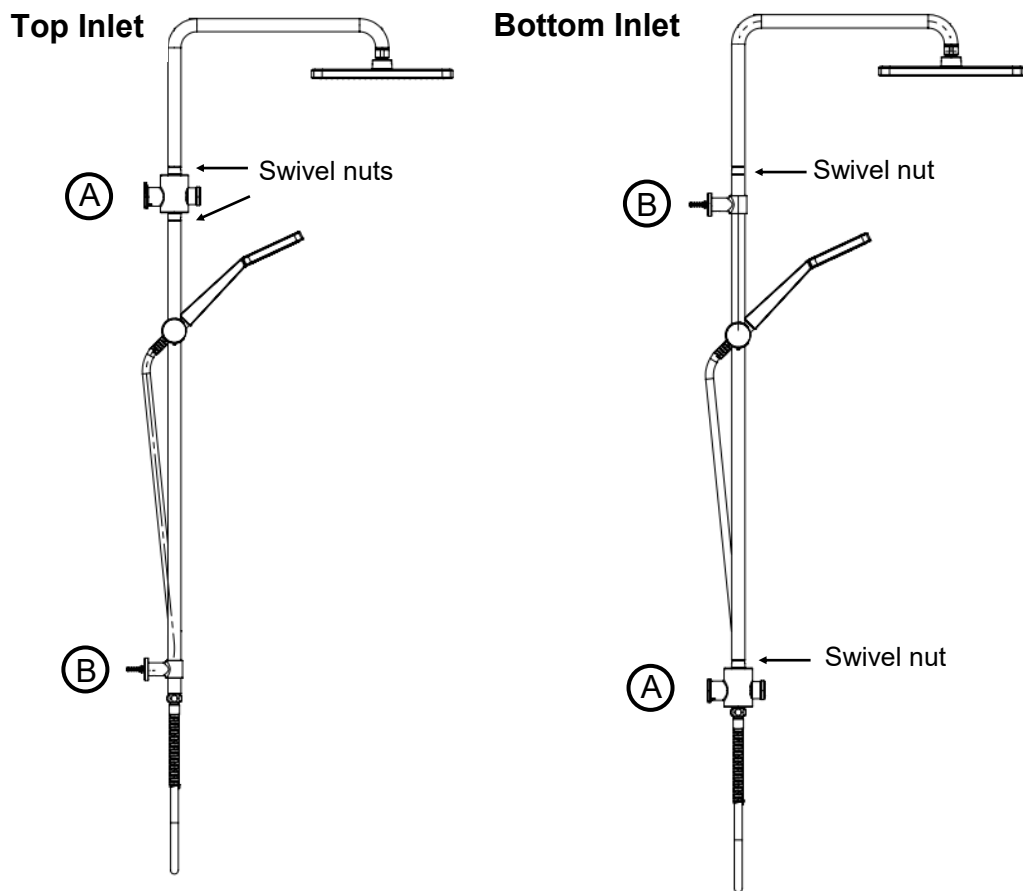

- **PLEASE CHECK** the shower mixer is a suitable match.
Not suitable with spring loaded diverter mixers.
- **LOW PRESSURE:** Recommended installed with a Greens FloBOOST shower mixer.
Refer technical data on front page.
- **MAINS PRESSURE:** The restrictor must be fitted to the overhead.
to give back pressure on spring loaded diverter (refer back page).
- Diverter can be installed as top or bottom inlet.
- Diverter flange is 39mm dia.

Install The 15mm Female Inlet Adaptor:

1. Install a **brass 15mm male wingback elbow** (not supplied).
 - a. Remove the adaptor from the diverter.
 - i. **NOTE:** Loosen off the grub screws to ensure the O-rings are not cut on the adaptor.
 - b. Note: The female Adaptor requires **MAX 15mm thread from finished wall.**
 - c. **CHECK:** Height required with customer as there is no height adjustment.
2. Cut the inlet thread to MAX 15mm from finished wall.
3. Install using a spanner or a 10mm Allen key.
 - a. **Back edge of the adaptor to be level with the finished wall as shown.**

Install Mounting Sleeve For Top Bracket:

1. Mark out and install mounting sleeve inline with the inlet to ensure rail will be straight.
 - a. **Note:** For adjusting the top bracket height, a locking screw is inside bracket. To adjust use 5mm Allen key.
 - b. Wall anchor provided for masonry walls.

Installing Diverter To Inlet Adaptor:

1. Grease O-rings on the inlet adaptor.
2. **CHECK:** Grub screws are not projecting into the bore and tighten to secure.
 - a. Loosen off to ensure they do not cut the O-rings on the adaptor.
 - b. Ensure the wall seal is in place on flange.
 - c. Additional sealant will be required for uneven surfaces for water seal.

Install Rail & Bracket:

1. Adjust bracket height for mounting sleeve and install rail to diverter and sleeve.
 - a. **To adjust bracket height,** back off grub screw inside and tighten at height required using a 5mm Allen key.
 - b. Tighten the 2 grub screws on bracket to secure to mounting sleeve.
 - c. **Remove the protective tape** from seal on the trim ring.
 - d. **Carefully position trim ring** against finished wall
 - i. Note: The trim ring has an O-ring on the inside, when sliding trim over the grub screws are below the surface as not to cut the seal.
 - e. Additional sealant will be required for uneven surfaces for water seal.
2. Install top arm for overhead.