





VANTAGE SHOWER MIXER TRIM SETS INSTALLATION INSTRUCTIONS

PRODUCT #

BATCH #


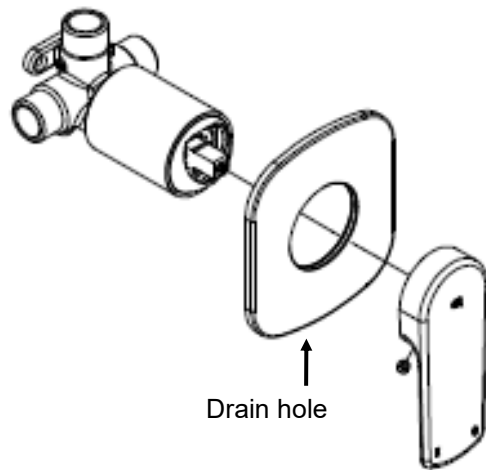


Face Plate: Remove protective tape from the seal and position plate against wall.
Ensure seal is in place on the inside of plate for valve body.
Sealant will be required behind faceplate on uneven surfaces for water seal.

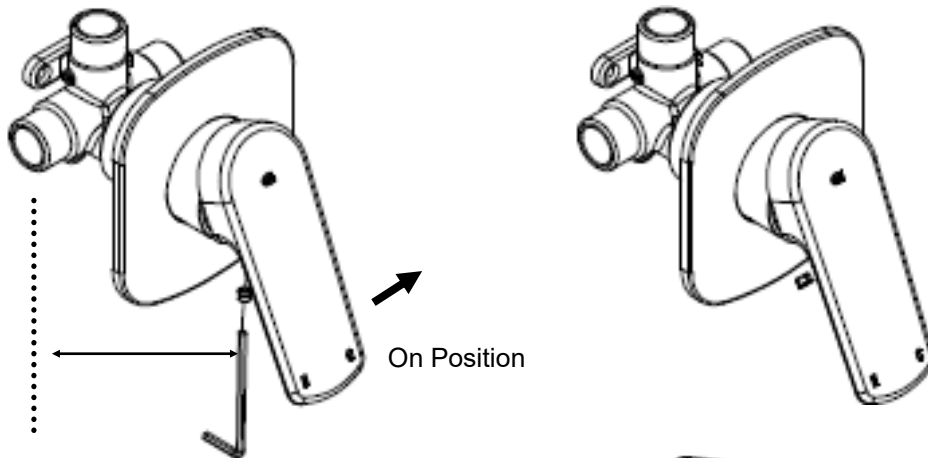


Handle: ALLEN KEY PARALLEL with wall.

Button: SMALL CUT-OUT TO THE BOTTOM.
Cut-out for easy removed with a small spike.

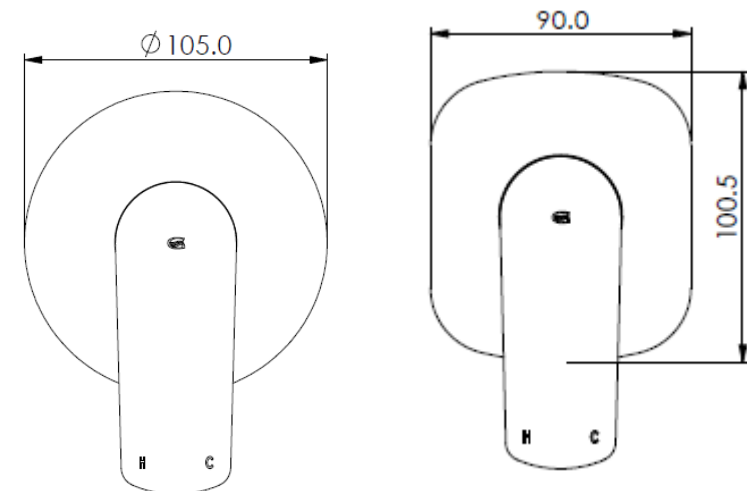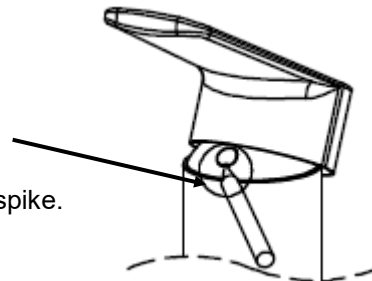


Distributed by: Greens Global Limited
PO Box 5055, Hamilton, 3200
22 The Boulevard, Te Rapa, Hamilton 3200
Phone: 07 849 0109, Fax: 07 849 0540
Website: www.greenstapware.com
Email: nzsales@greenstapware.com
Service Hotline: 0800 655 455

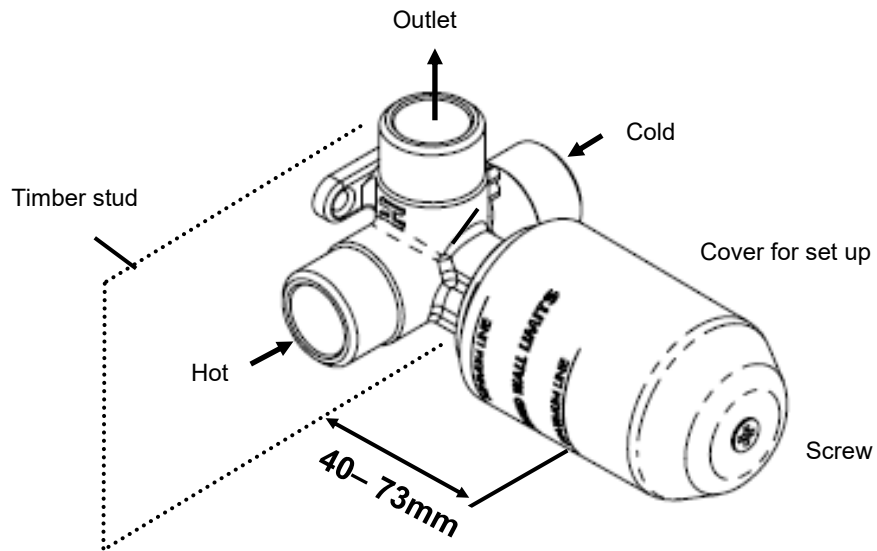


Installing Valve Body:

- **15mm Female** inlets & outlet.
 - a. Hot inlet (left), Cold inlet (Right)
 - b. Outlet (Top).
- **40mm - 73mm back of valve body to the finished wall.**
- Finished wall cut-out **45 - 50mm.**
 - a. **NOTE: Close cuts required to allow for small face plates.**
- Do not pressure test with valve in the open position when the outlet is closed.

INSTALLING TRIM

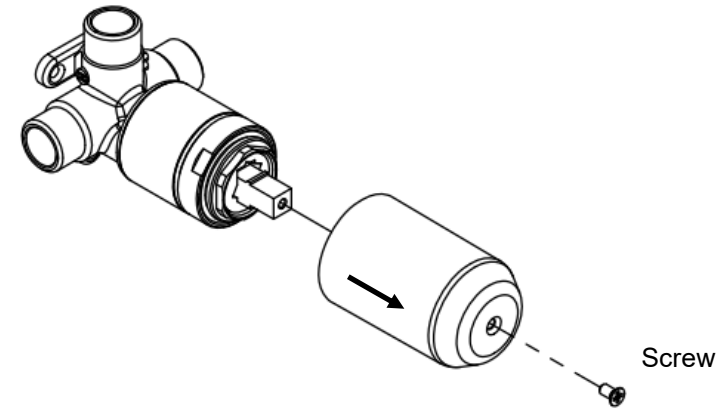

Mudguard Cover: Remove screw, pull off.

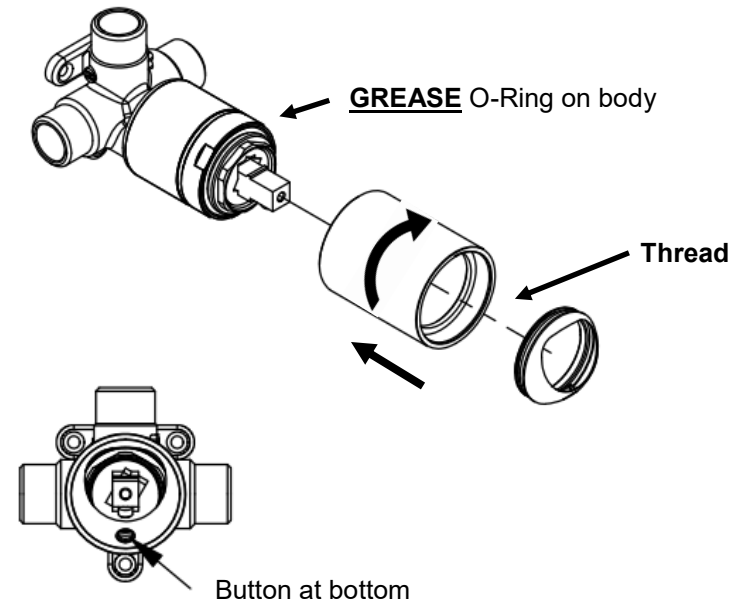

Cover Sleeve: PUSH ON + SCREW onto cartridge nut to hold onto body.

Cover Cap: Push in with button hole at the bottom.