




## TEXTURA & TESORA WALL MOUNTED BATH SPOUT INSTALLATION INSTRUCTIONS

PRODUCT #

BATCH #

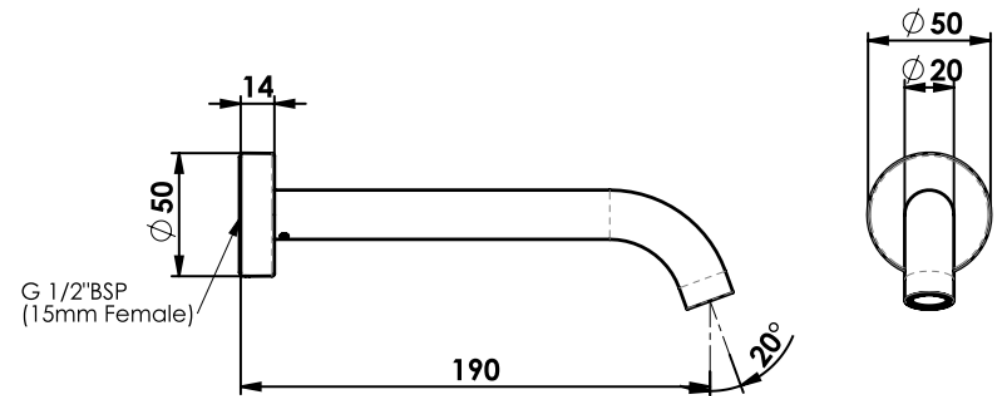

Please contact country of purchase.

### NZ:

**Distributed by: Greens Global Limited**  
PO Box 5055, Hamilton, 3200  
22 The Boulevard, Te Rapa, Hamilton 3200  
Phone: 07 849 0109, Fax: 07 849 0540  
Website: [www.greenstapware.com](http://www.greenstapware.com)  
Email: [nzsales@greenstapware.com](mailto:nzsales@greenstapware.com)  
**Service Hotline: 0800 655 455**

### Australia:


**Distributed by: Greens Global (Australia) Ltd**  
36 Naxos Way Keysborough Vic 3173  
Phone: 1800 244 487 Fax: 1800 244 212  
Email: [aussales@greenstapware.com](mailto:aussales@greenstapware.com)  
Website: [www.greenstapware.com](http://www.greenstapware.com)  
**Service Hotline: 1800 244 992**

Installation shall be in accordance with the AS/NZS3500 series of standards.

Please leave this instruction sheet with the customer.

## INSTALLATION INSTRUCTIONS

**NOTE:** For finished wall, please refer to drawing to ensure the flange covers the mounting hole.

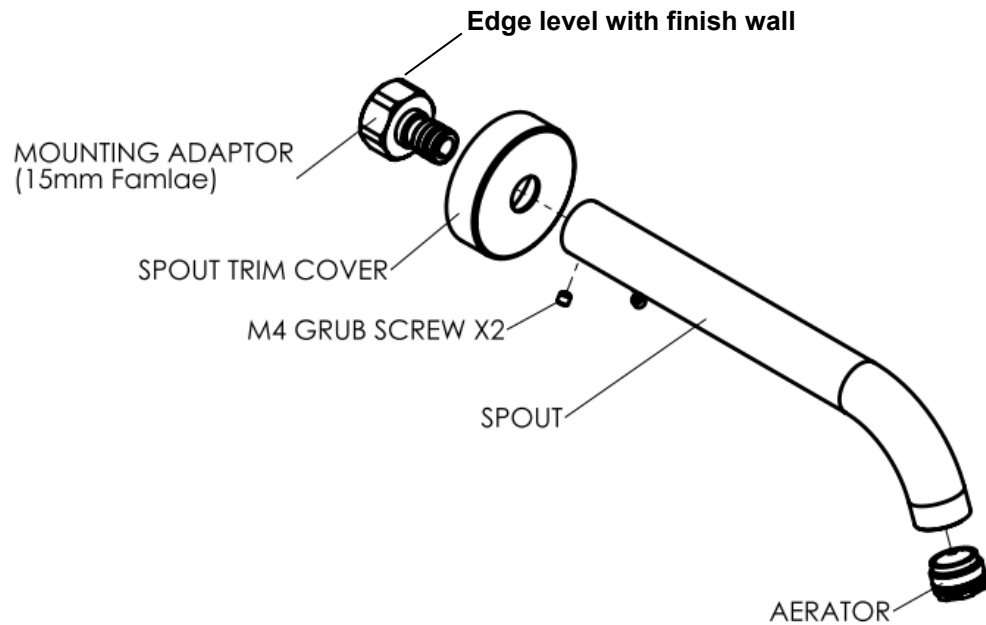

**Install a brass 15mm male wingback elbow** (not supplied).

1. Note: The female mounting adaptor requires 10mm thread from finished wall.

**Install the female mounting adaptor.**

1. Remove the 15mm female mounting adaptor by unscrewing the grub screws under the spout until nearly out.
  - a. This is to ensure the O-ring on the adaptor is not cut.
2. Cut the inlet thread to 10mm from finished wall.
3. Install using a spanner or an 1/4" Allen key.
  - a. **Back edge of the adaptor to be level with the finished wall as shown.**

**Install spout.**

1. Grease the O-ring on adaptor.
2. Remove the protective tape from seal on the flange and position against the wall over adaptor.
3. Install spout to mounting adaptor and tighten the grub screws.
  - a. **Check the grub screws are not protruding into the bore**, to ensure the O-ring on the adaptor is not cut.