


ROUND SWIVEL WALL MOUNTED BATH SPOUT INSTALLATION INSTRUCTIONS

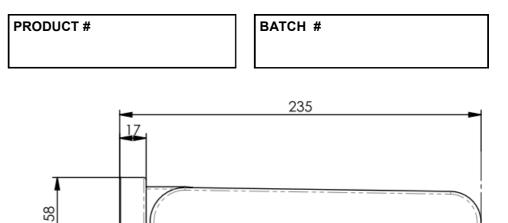

Please contact country of purchase.

NZ:

Distributed by: Greens Global Limited PO Box 5055, Hamilton, 3200 22 The Boulevard, Te Rapa, Hamilton 3200 Phone: 07 849 0109, Fax: 07 849 0540 Website: www.greenstapware.com Email: nzsales@greenstapware.com Service Hotline: 0800 655 455

Distributed by: Greens Global AUS PTY LTD

36 Naxos Way, Keysborough VIC 3173 Phone: 1800 244 487 Fax: 1800 244 212 Email: aussales@greenstapware.com Website: www.greenstapware.com Service Hotline: 1800 244 992 1/2" Female


Ø

Installation shall be in accordance with the AS/NZS3500 series of standards.

Please leave this instruction sheet with the customer.

INSTALLATION INSTRUCTIONS

NOTE: For finished wall, please refer to drawing on front page to ensure the flange covers the mounting hole.

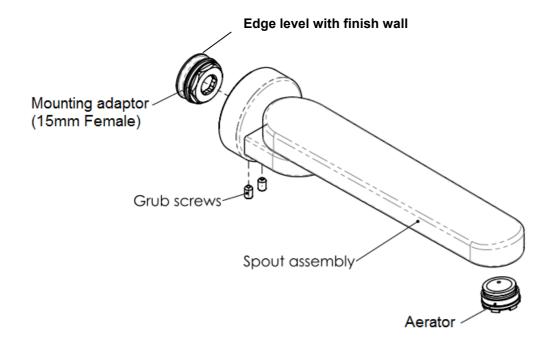

Install a brass 15mm male wingback elbow (not supplied).

1. Note: The female mounting adaptor requires 10mm thread from finished wall.

Install the female mounting adaptor.

- 1. Remove the 15mm female mounting adaptor by unscrewing the grub screws under the spout until <u>nearly out.</u>
 - a. This is to ensure the O-ring on the adaptor is not cut.
- 2. Cut the inlet thread to 10mm from finished wall.
- 3. Install using a spanner or a 12mm Allen key.

a. Back edge of the adaptor to be level with the finished wall as shown.

Install spout.

- 1. Grease the O-ring on adaptor.
- 2. Apply a bead of silicone behind flange to ensure water seal.
- 3. Install spout to mounting adaptor and tighten the grub screws.
 - a. Check the grub screws are not protruding into the bore, to ensure the O-ring on the adaptor is not cut