![Greens logo]

POLARO WALL MOUNTED BATH SPOUT
INSTALLATION INSTRUCTIONS

PRODUCT #	BATCH #
146183	240920
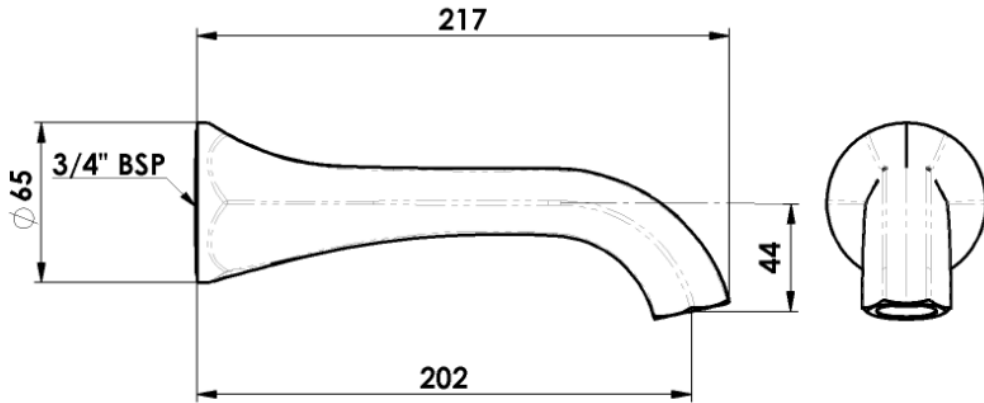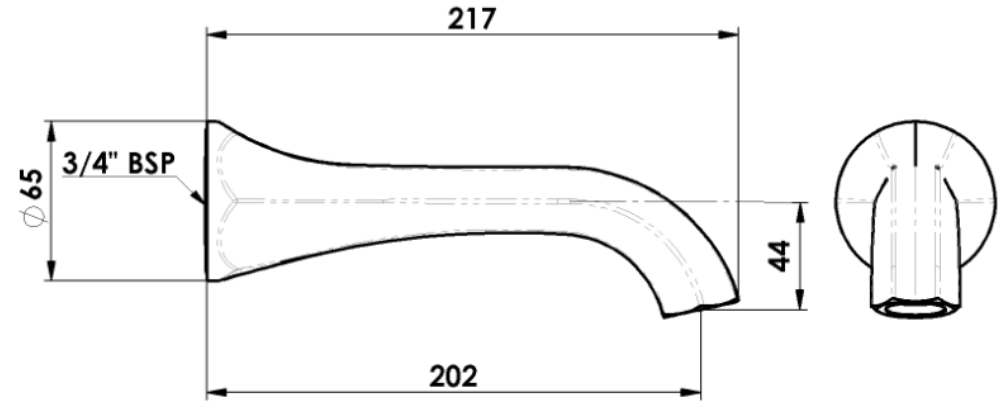
Installation shall be in accordance with the AS/NZS3500 series of standards.

Please leave this instruction sheet with the customer.

Please contact country of purchase.

20mm Female
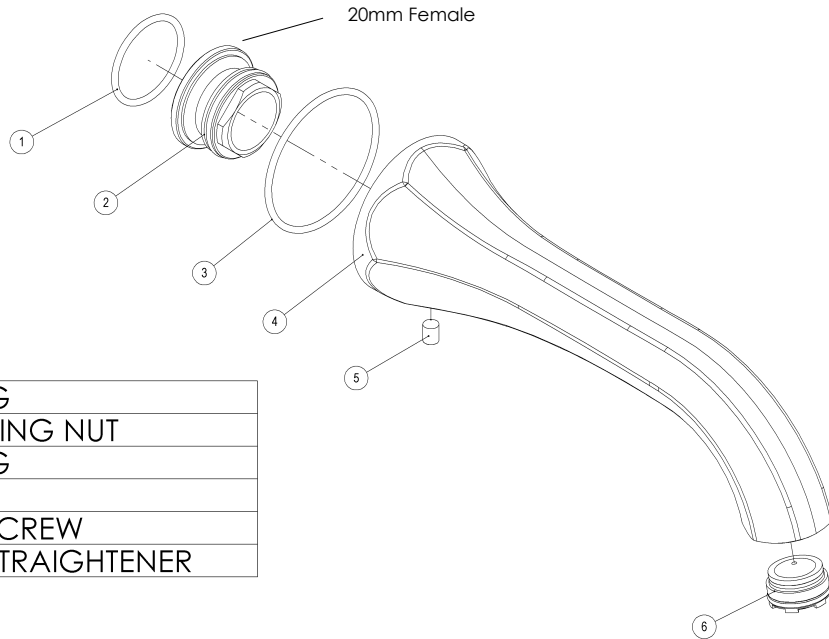
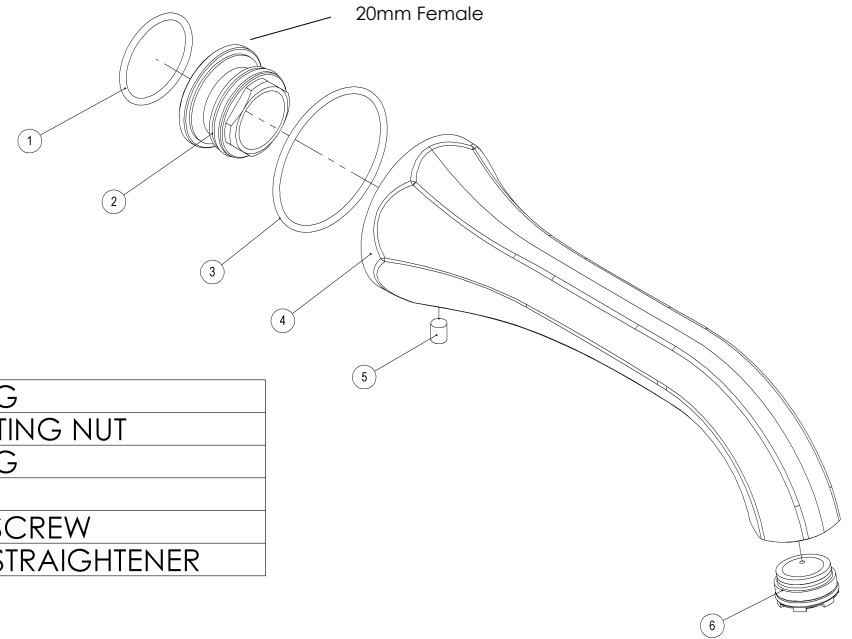| 1	'O' RING
2	MOUNTING NUT
3	'O' RING
4	SPOUT
5	GRUB SCREW
6	FLOW STRAIGHTENER

Installation Instructions

1. Remove mounting nut #2.
   a. loosen off grub screw #5 until nearly out to ensure the grub screw does not cut the o-rings on the mounting nut.
2. Apply grease to o-rings on mounting nut. (Not supplied.)
3. Install mounting nut #2 to supply line and ensure the o-ring seal #1 is in place.
4. Install the spout #4 and ensure the o-ring seal #3 is in place.
5. Position spout and tighten the grub screw #5.

After Installation:
Test with water running.