



Sink Mixer

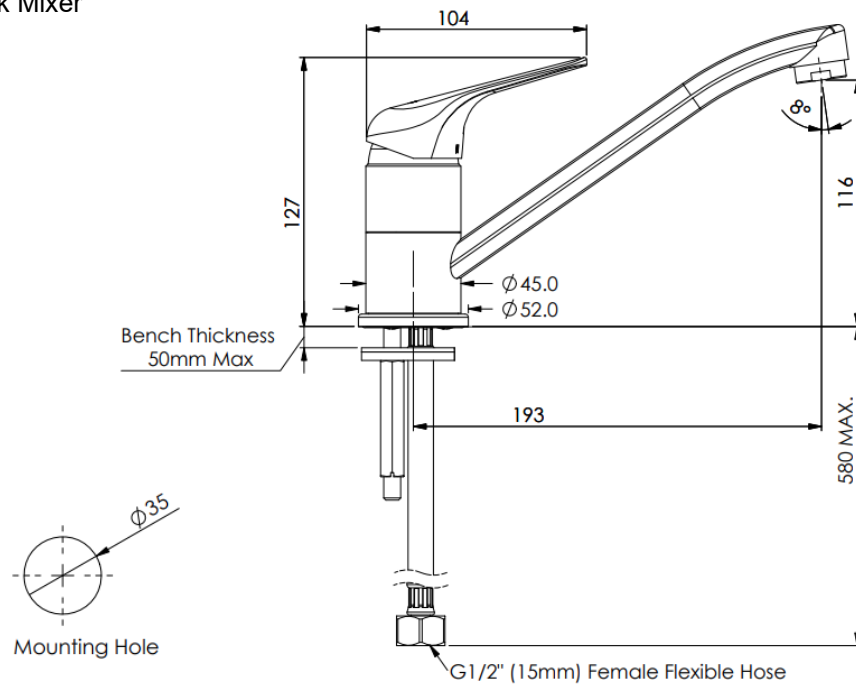

Fixed Basin Mixer

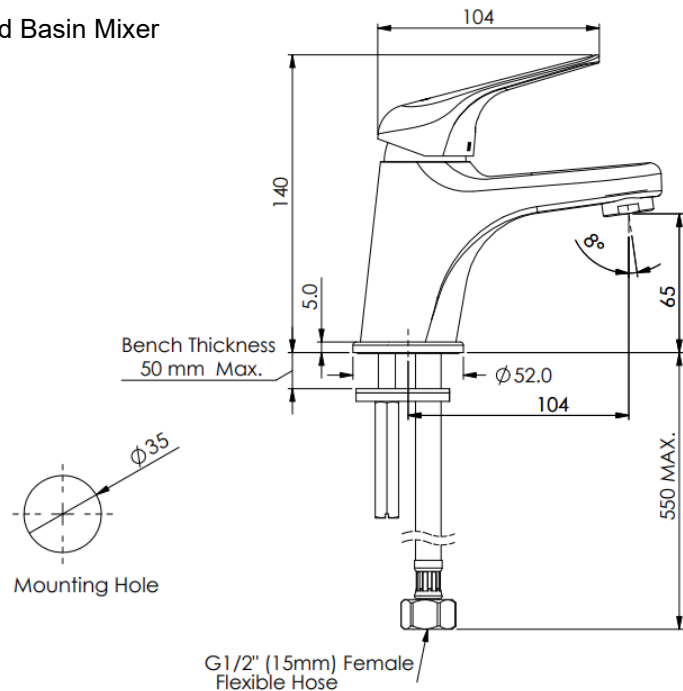

SELECT

(For All Pressure Installations)

INSTALLATION INSTRUCTIONS

PRODUCT #

BATCH #

ATTENTION PLUMBER

To ensure the optimum performance and customer satisfaction please adhere to the following:

- **Flush out all pipe work prior to installation.**
- Installation shall be in accordance with the AS/NZS3500 series of standards.
The maximum operating pressure within any building should not exceed 500kpa. Pressure above 500kpa can cause damage from water hammer, reducing life of appliances, taps and fittings and cause excessive noise in the plumbing system.
- Pressure over 500kPa will require a limiting valve.
- **Inline strainer / filter must be installed** in the line before the mixer to cover both hot and cold supplies (not supplied). Must be accessible.

TECHNICAL DATA

- **Suitable for use with high, low and unequal pressure supply networks.**
- Minimum Water pressure for satisfactory operation: 35KPa
- Maximum Water pressure: 500kPa
- Maximum hot water temperature: 70°C
If the Water temperature exceeds 70°C an approved Tempering Valve must be fitted.
- The flow rate of the sink and basin mixers has been rated under the NZ Water Efficiency Labeling Scheme (WELS).


Please leave this form with the product once installed.

For full warranty terms and conditions, please see the warranty card enclosed with this product


Distributed by: Greens Global Limited

PO Box 5055, Hamilton, 3200
22 The Boulevard, Te Rapa, Hamilton 3200
Phone: 07 849 0109, Fax: 07 849 0540
Website: www.greenstapware.com
Email: nzsales@greenstapware.com
Service Hotline: 0800 655 455

Sink Mixer

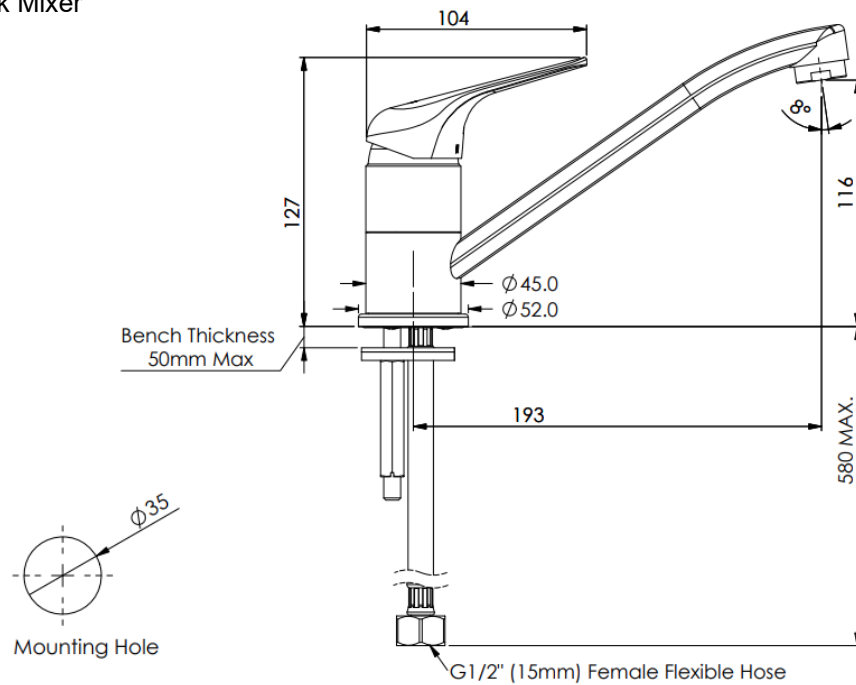

Fixed Basin Mixer

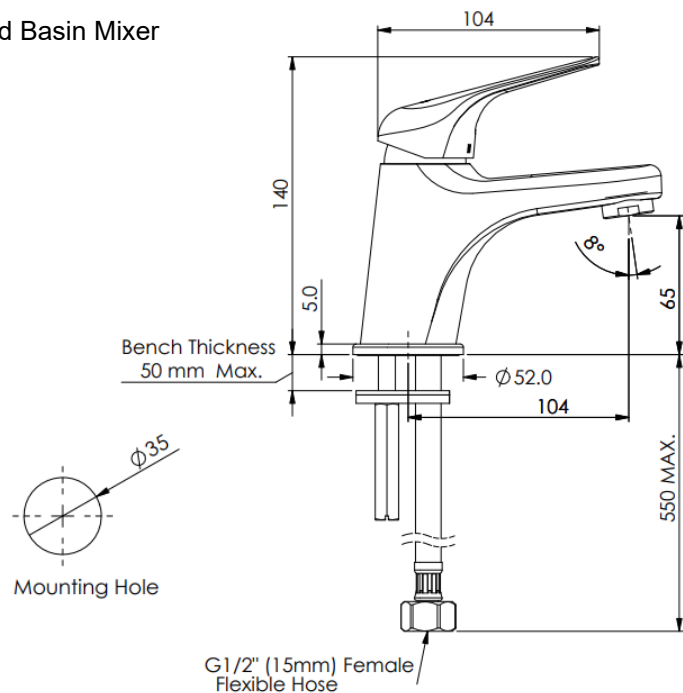

INSTALLATION INSTRUCTIONS SINK AND BASIN MIXERS

BENCH TOPS


- ◆ Formica/wooden bench tops, extra mounting support is required below the bench.
- ◆ Stainless steel bench tops ensure the mounting washer is against the S/Steel.
- ◆ **Vitreous china tops additional sealant maybe required at the base of the mixer to ensure a water tight seal.**

Note: Fits Maximum Bench thickness of 50mm.

To install mixer, cut a mounting hole **35mm** in diameter in the bench surface.

Equal pressure Installations only: Please remove non-return valve pre fitted to "Hot" water inlet hose (red braided hose).

1. Remove mounting nut, rubber and steel from mixer.
 - a. Check mounting thread is **tight in mixer body**.
2. Check **base seal is in place** and is fitted between base flange and bench top.
3. Lower fitted hoses into the mounting hole and position mixer with base flange in bench top.
 - a. If required a hose can be removed by unscrewing anti-clockwise.
Hand tighten only into mixer inlet.
4. Position mixer in bench top with the **mounting thread to the rear**.
5. From under bench, install the **rubber washer** then the **steel washer** over mounting thread and screw the **mounting nut** to mounting thread.
Tighten with 11mm tube spanner and secure the mixer to the bench.
6. **Connect flexi hoses** to water supply.
 - a. Non-return valve must be fitted to hot inlet hose for unequal pressure (arrow for flow).
 - b. The union nuts must be connected to 15mm thread fittings which have a **machined end face with a chamfer, not "sawn off" threaded tube.**
 - c. **Do not over tighten the nuts.**
 - i. Hand tighten then 1/4 turn with spanner.
 - d. **Do not kink, stretch or twist**, any bends in the flexible hose should have radius of no less than 85mm
- 7: Turn on water supply and **check for leaks**.

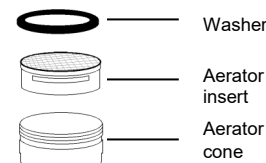

WELS

On mains pressure systems to achieve the WELS star rating the aerator insert at the end of the spout needs to be replaced.

Unscrew the aerator cone and replace aerator insert with the WELS rated aerator insert supplied.